


PAGE 1





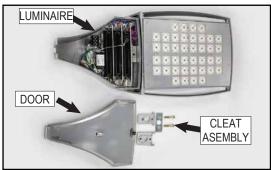

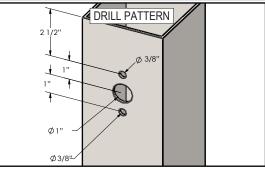

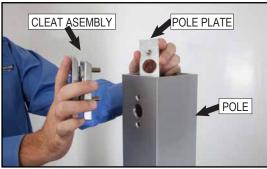

STOP

BEFORE YOU BEGIN

- Read these instructions completely and carefully.
- Save these instructions for future use.



Fig. 1

Fig. 2

Fig. 3

WARNING


- To avoid possible risk of fire or shock turn off power prior to installation or maintenance preferably at circuit breaker.
 Product must be installed following all NEC and local
- Electrical Codes.

UNPACKING

- This luminaire has been properly packaged so that no damage shall occur during transportation
- Inspect and confirm

INSTALLATION

- Use drill pattern for poles that are not supplied by Visionaire Lighting. Be sure wire-way hole is free of rough edges and adverse burr (see Fig. 1).
- Slip pole plate into top of pole and align to holes on pole making sure that pole plate is flush to inside of pole wall (Fig 2).
- Attach cleat assembly to pole (leave very loose) with the two hex head bolts attached to cleat assembly. Hook attached to cleat assembly must be at bottom (Fig. 3).
- Pull electrical power leads (by others) thru wire-way hole on pole. Make sure there is at least 12" of leads emerging from pole (Fig. 4).

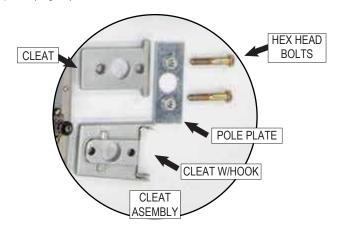





VLX-Installation Instructions

PAGE 2



Fig. 5



Fig. 6



Fig. 7



Fig. 8



Fig. 9

- Slide luminaire arm between cleats (Fig. 5).
- Firmly tighten luminaire to pole with (2) hex head bolts attached to cleat assembly (Fig. 6).
- Make all electrical connections to inside of luminaire per NEC and/or any required local electrical codes.
- A terminal block is supplied (Fig. 7)
- Attach Door to luminaire (Fig. 8) and hook door to luminaire with aircraft cable (Fig. 9).
- Push door up into luminaire until a "click" is heard to engage the lock and close the luminaire (Fig. 10).

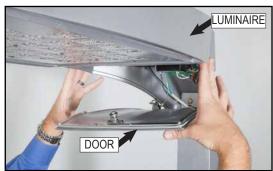


Fig. 10

