
Roadway LX - Installation Instructions

SPECIFICATIONS

- Corrosion Resistant Cast Aluminum Body
- Dimensions W 16" L 31" H 5"
- Weight 24 Lb EPA = 0.822 Ft²



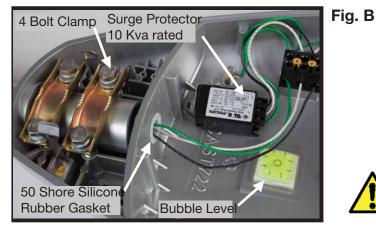





BEFORE YOU BEGIN

- Read these instructions completely and carefully.
- Save these instructions for future use.



WARNING

- To avoid possible risk of fire or shock turn off power prior to installation or maintenance preferably at circuit breaker.
- Product must be installed following all NEC and local Electrical Codes.

UNPACKING

- This luminaire has been properly packaged so that no damage shall occur during transportation.
- Inspect and confirm

1. INSTALLATION

- Open tool-less access clips and gently swing service door downward.
- Loosen the four 1/2"-13 hex head bolts holding the two clamps brackets enough to slide luminair deep, until arm rest on steps that would sit between the mast arm and pipe clamps.
- Run electrical feed wires to inside of luminaire terminal block.

2. LEVELING

- Using the different step heights, adjust the luminaire and using the bubble level (see Fig. B).
- Confirm that the luminair is properly leveled

3. SECURING

 Tighten both sets of pipe clamp bolts to fully secure the luminaire to the pole, using recommended torque 180 to240 in-lbf (15 to 20 ft-lbf / 20 to 27 N-m).

CAUTION

- Prevent over torque damage.
- Do not over torgue nuts and bolts.




CONFORMS TO UL STD 1598 CAN/CAS STD C22.2#250#250.0



19645 Rancho Way • Rancho Dominguez, CA 90220 • 877.977.LITE (5483) CERTIFIED TO www.visionairelighting.com





Roadway LX - Installation Instructions

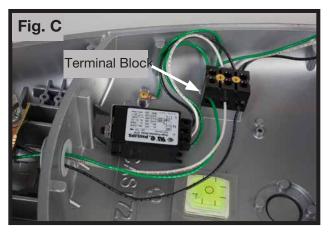

4. AC CONNECTION

- Verify existing input voltage and select matching voltage accordingly.
- Make all electrical connections in accordance with national and local electrical code using the Proovided terminal block (see Fig. C).
- Connect primary electrical feed wires
- #8 Solid copper (typical) N = Typically White
- G = Typically Green
- L1 = Typically Black

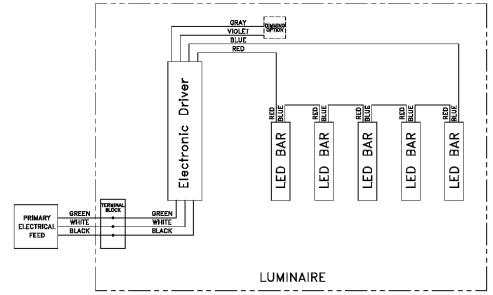

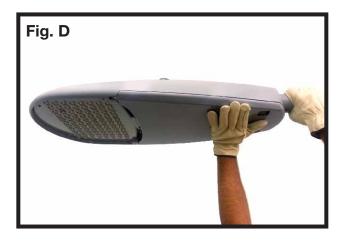

5. FINAL ASSEMBLY

• Close door verifying that gasket is seated properly and tool-less access clips are properly engaged (see Fig. D).

CAUTION

- Risk of injury. LED light source achives full intensity immediately upon being power
- Do not look directly at LED light source while energized.



WARNING

 Visionaire Lighing can not and will not be liable for any modifications and/or resultof mdification to electrical devices or luminaires.





19645 Rancho Way • Rancho Dominguez, CA 90220 • 877.977.LITE (5483) www.visionairelighting.com