

LSO-S-WM Installation Instruction

Fig. 1

Fig. 2

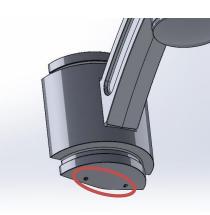

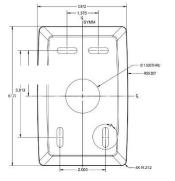







BEFORE YOU BEGIN

- Read these instructions completely and carefully.
- Save these instructions for future use.



WARNING

- To avoid possible risk of fire or shock turn off power prior to installation or maintenance preferably at circuit breaker. Product must be installed following all NEC and local
- Electrical Codes.

UNPACKING

- This luminaire has been properly packaged so that no damage shall occur during transportation
- · Inspect and confirm

INSTALLATION

- Loosen the (2X) set screws and remove the Mount bracket from the luminaire. (Fig. 1).
- Use drill pattern to mount in the wall. Be sure wireway hole is free of rough edges and adverse burr (Fig. 2).
- Place and fasten (4X) set screws to secure the mount bracket above the wall, tighten to 20 lb.-in (Fig. 3).
- Slide the power leads cable between the wire way hole and make electrical connections per NEC (the National Electrical Code).
- Place luminaire into the mount bracket (Fig. 4).
- Fasten (2X) set screws to secure the luminaire.

NOTE: Not to scale, for reference only



19645 Rancho Way • Rancho Dominguez, CA 90220 • 877. 977.LITE (5483) www.visionairelighting.com

Fig. 3