

Smartpack Installation Instructions

1. Open LUMINAIRE by loosening two (2) retained SOCKET HEAD PHILIPS SCREWS on end of luminaire.
2. Open LED ASSEMBLY by loosening three (3) PAN HEAD PHILIPS SCREWS (save screws).
3. Remove ground wire from BACK HOUSING by loosening one (1) SOCKET HEAD PHILIPS SCREW.
4. Remove DRIVER from DRIVER PLATE by loosening two (2) retained SOCKET HEAD PHILIPS SCREWS at the ends of the driver.
5. Remove DRIVER PLATE by loosening two (2) PAN HEAD SCREWS and one (1) FLAT HEAD SCREW (save screws).
6. Drill three (3) 5/16" Dia. holes on BACK HOUSING (see **Figure 1**).
7. Install three (3) 1/4-20 x 1" LONG STUDS (not included) to wall at desired mounting location.
8. Raise BACK HOUSING to wall and firmly attach to 1/4-20 x 1" LONG STUDS (not included) on wall using three (3) 1/4-20 hex nuts and lock washers (not included).
9. Unscrew desired conduit hole cap(s) (see **Figure 2**).
10. Attach 1/2" POWER FEED CONDUIT (not included) to threaded conduit connection holes on the BACK HOUSING.
11. Replace DRIVER PLATE and LED ASSEMBLY using same fasteners.
12. Close LUMINAIRE and firmly tighten the two (2) RETAINED SOCKET HEAD PHILIPS SCREWS on end of LUMINAIRE.

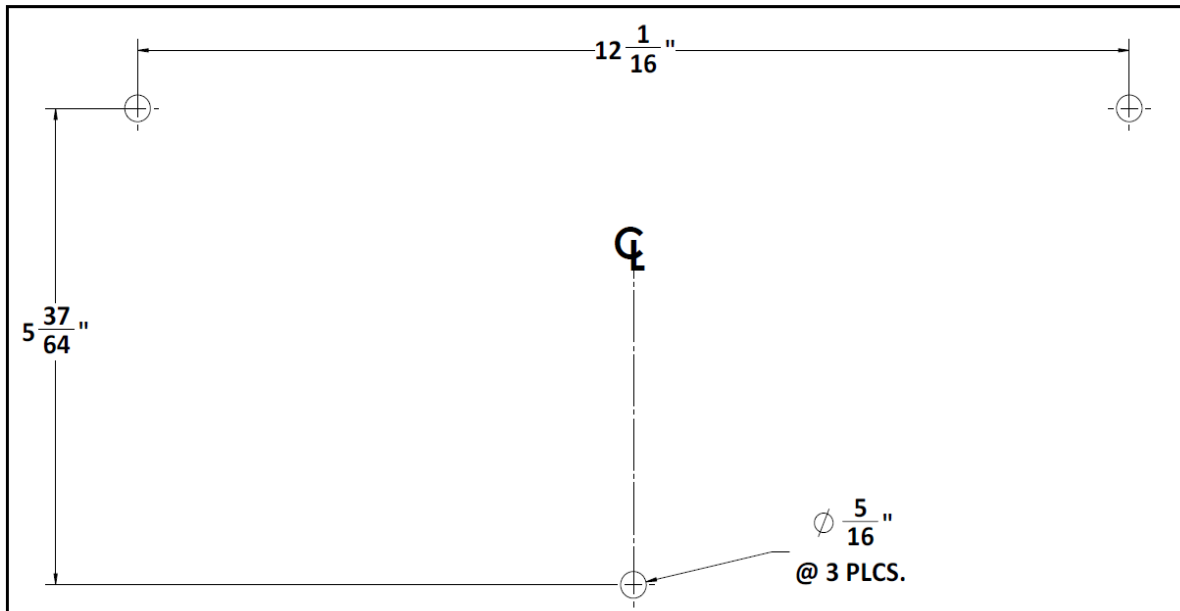


Figure 1: Drilling pattern for mounting

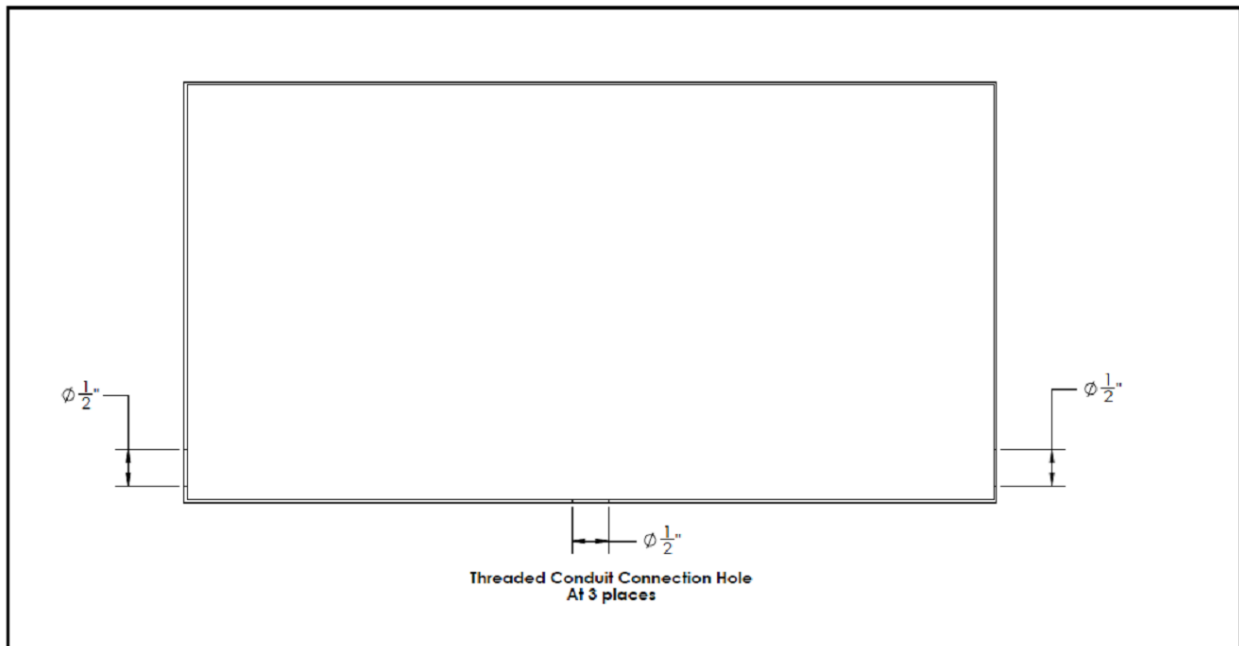


Figure 2: Locations of threaded conduit connection holes